



TERRACE WALL STEP DETAIL Standard Steps With 1" Overhang

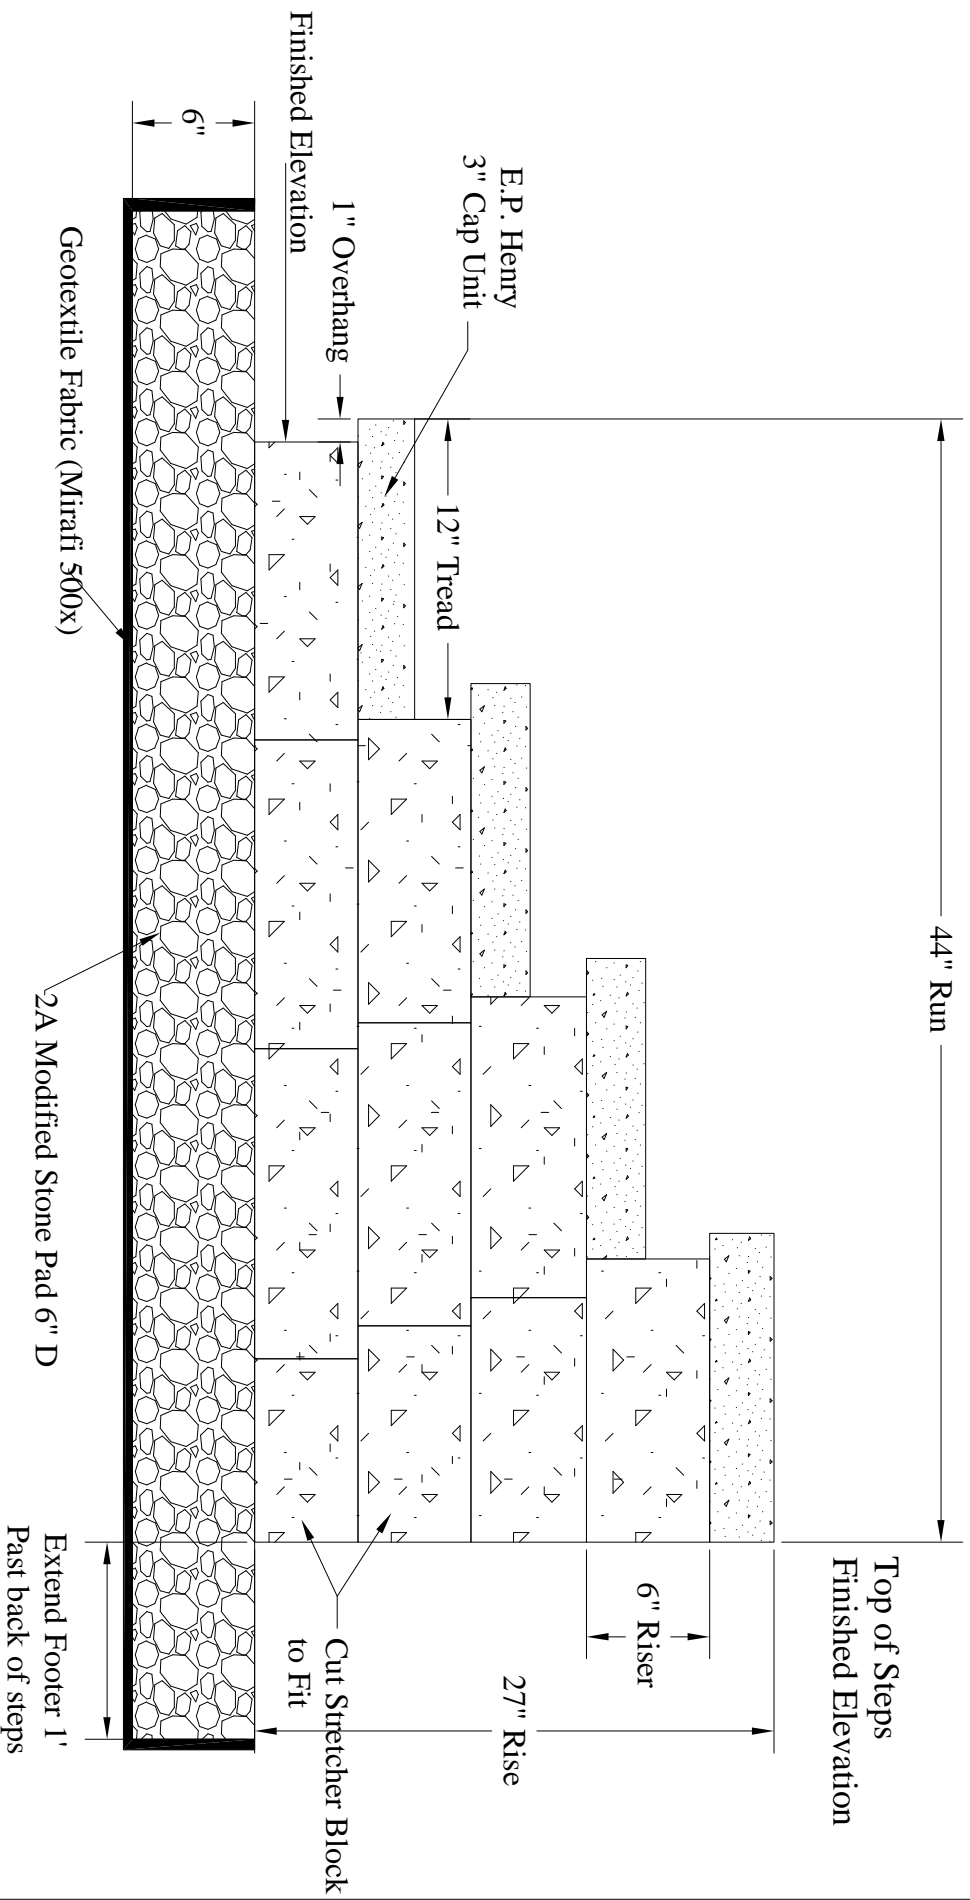

Footer: For steps being built as part of a wall or into an existing grade, footer should extend 1' past back block of steps. Fill and compact excavated footer area behind steps w/modified stone as steps are built.
Block: Core fill block and all voids with modified stone or clean stone (#57 or 2B). Use high strength concrete adhesive between all block and cap units.

Terrace Wall Step Detail	
	Call 1-800 44 Henry
Ref. No. TW Step	201 Park Avenue, PO Box 615 Woodbury, NJ 08096
Figure 1	